


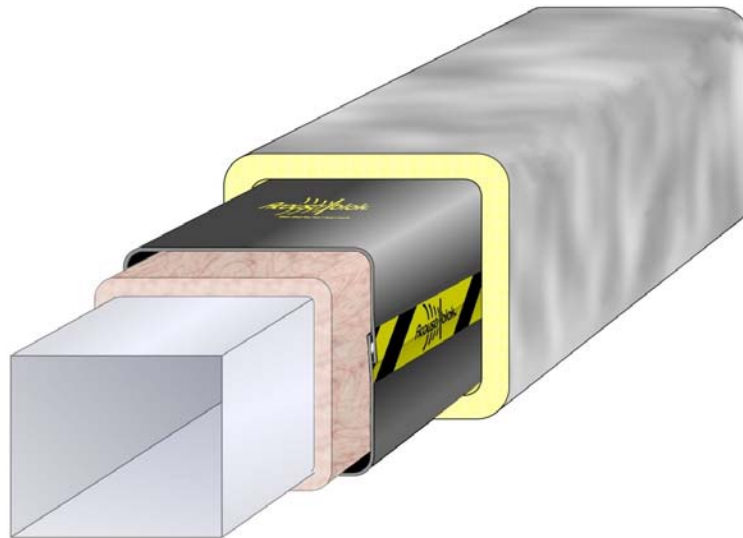

Duct Work Application Suggestions

Acoustiblok® Sound Isolation Material is not U.L. classified as a surface facing product and as such it should be enclosed under a suitable industry wraps. (Refer to our UL file classification)

- 1) Wrap duct with at least 1" thick loose insulation duct wrap per manufacturers' instructions. This may be faced or unfaced wrap.
- 2) Cut the Acoustiblok Sound Isolation material to a length to surround the loose insulation and allowing for a 2"-3" overlap. Apply a 3/8" bead of Acoustiblok Acoustical Sound Sealant along one edge. Place seam on the bottom side of the duct and overlap the two ends. Seal the seams using Acoustiblok Acoustigrip tape. Overlap each Acoustiblok section caulking and taping the seams. Be sure that all ends are sealed using the Acoustigrip tape.
- 3) Wrap the Acoustiblok with either a loose faced duct wrap size fully cover the Acoustiblok Sound Isolation Material. Seal all exterior seams and ends.



It is the specifier, purchaser, and installers responsibility to verify that the duct work system will withstand the additional weight of the Acoustiblok Sound Isolation Material (1lb/SqFt) and all other code requirements.